



SNV300 Series Non Return Valves Instruction Manual

Oasis Engineering Ltd 129 Birch Avenue, Tauranga, New Zealand. T: +64 7 928 3808 F: +64 7 928 3809 E: info@oasisNGV.com W: www.OasisNGV.com



Safety

Setting The Standard

Warning!

Oasis recommends considering the use of the following PPE along with any other site specific health and safety requirements:





Ensure the system is drained & isolated before any installation or servicing work is carried out.

Tools Required



Oasis Engineering Ltd. 129 Birch Ave, Tauranga, 3110, New Zealand, Ph +64 7 9283808, Info@oasisngv.com, www.oasisngv.com

We reserve the right to modify product specifications without prior notice.



Installation Instructions

Setting The Standard

- 1. Unscrew valve and remove poppet.
- 2. Ensure the correct flow direction is considered before welding joint.





- 3. Joint is to be welded, connecting the non return valve to the pipe. Polish and clean weld to the required standard.
- 4. Reinstall poppet.







Installation Instructions

Setting The Standard

5. Ensure the correct flow direction is considered and nut is in place before welding join.

6. Joint is to be welded, connect the non return valve to the pipe. Polish and clean weld to the required standard.



Fully weld join.

7. Connect the two sides together.





4



Setting The Standard

Service Kit Parts



The Complete Oasis Seal Kit must be used

Tools Required



5



Servicing Disassembly

Setting The Standard



6



4. Discard seal.

Servicing Disassembly

Setting The Standard

5. Discard O-ring.





6. Clean components.



7



Servicing Assembly

Setting The Standard

7. Grease O-ring.

8. Fit new seal.

9. Assemble poppet.

